



HYDRAULIC BOAT LIFT REMOTE CONTROL INFORMATION

The remote transmitter can de-program due to either a power loss (dead battery) or electrical interference, which will require re-programming of the transmitter.

Proper function of the RC system is dependent upon several factors that are not controllable by the manufacturer. RGC is not responsible for the following: Improper installation, Low battery, Natural occurrences, Use other than intended, Location of panel, receiver or transmitter too close to interfering metal objects, Multiple RC panels within 15 feet of each other, Use in area with external interference such as radio, cell phone, and TV towers or a natural magnetic field, Blocked or shielded antenna, Other transmitter interference from cell phones, cordless phones, wireless systems, CB and mobile transmitters, computer and industrial equipment, electric motors, even fluorescent lights.

Lock/ Unlock remote unit

To unlock or lock your remote units, press the two blue buttons simultaneously on your remote. The display will indicate locked or unlocked mode.

Reprogramming Your Remote Control

In the event that you may need to reprogram your remote control unit, please follow these instructions:

1. Hold down both the red button (located on the black RC box) and the "UP" button (located on the hand held remote) at the same time for five (5) seconds.
Note: If black RC box does not have red button on the outside use the next procedure below.
2. Release "RED" button (located on the black RC box) and continue to hold down the "UP" button (located on the hand held remote) for a additional five (5) seconds.

-OR-

1. Remove cover from black RC box. A see-through cover control unit is inside this box. Press "black" button (located on the side of the see-through control unit) until red light flashes once in the see-through control unit located in corner.
2. Release the "black" button then hold down the "UP" button (located on the hand held remote) for five (5) seconds.

You may have to repeat these two (2) steps more than once to reset your remote control unit.