

HL CANOPY SUPPORT INSTRUCTIONS

P/N 4110010 HL CANOPY SUPPORT PACKAGE			
Reference	Part Number	Quantity	Description
1	4100525	2	HL CANOPY SUPPORT POST (A)
2	4100526	2	HL CANOPY SUPPORT POST (B)
3	4100530	2	HL 5K-7K CANOPY SUPPORT HORIZONTAL
	4100920	1	HL CANOPY SUPPORT CARTON OF PARTS

P/N 4110030 HL XL CANOPY SUPPORT PACKAGE			
Reference	Part Number	Quantity	Description
1	4100525	2	HL CANOPY SUPPORT POST (A)
2	4100526	2	HL CANOPY SUPPORT POST (B)
3	4101530	2	HL XL CANOPY SUPPORT HORIZONTAL
	4100920	1	HL CANOPY SUPPORT CARTON OF PARTS

P/N 4100920 HL CANOPY SUPPORT CARTON OF PARTS			
Reference	Part Number	Quantity	Description
4	9703593	8	THREE HOLE PLATE
	4100925	1	HL CANOPY SUPPORT BAG OF BOLTS
			<i>consisting of:</i>
A	5896248	16	3/8-16 x 1-1/4 HEX HEAD CAP SCREW
B	5896255	8	3/8-16 x 3 HEX HEAD CAP SCREW
C	5897017	8	3/8-16 x 3-1/4 HEX HEAD CAP SCREW
D	5896406	32	3/8-16 FLAT SAE WASHER
E	5897016	32	3/8-16 NYLOCK HEX NUT

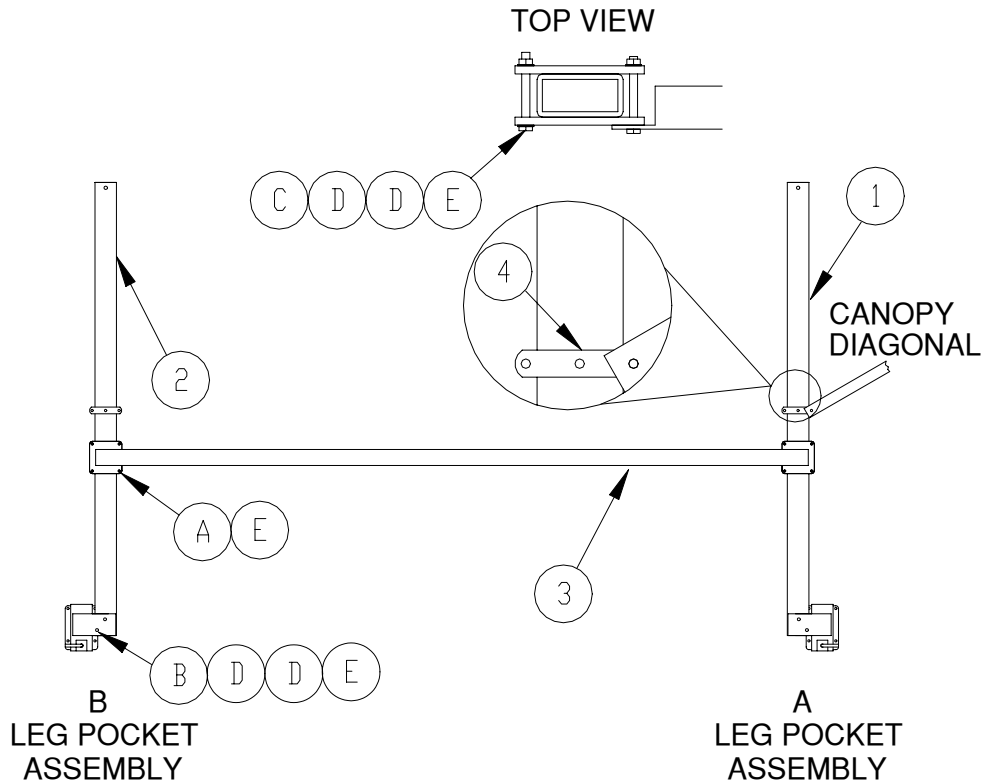


Figure 1

1. Read the following instructions thoroughly before starting work. If you don't understand a procedure, call Reimann & Georger Corporation or its distributors for assistance
2. Insure that you have all the parts listed. If any parts are missing or damaged, return to place of purchase immediately.
3. Mount the Canopy Support Post (A) **#1** into the (A) Leg Pocket Assembly as shown in Figure 1 using bolts **B**, flat washer **D** next to bolt heads, flat washer **D** next to locknuts, and locknuts **E**. Do not tighten any hardware until all components on one side of the lift are completely assembled.
4. Mount the Canopy Support Post (B) **#2** into the (B) Leg Pocket Assembly as shown in Figure 1 using bolt **B**, flat washer **D** next to bolt heads, flat washer **D** next to locknuts, and locknuts **E**.
5. Bolt the Canopy Support Horizontal **#3** to both Canopy Support Posts **#1** and **#2** as shown in Figure 1 using bolts **A** and locknuts **E**. Tighten all hardware.
6. Repeat steps 3 –5 for the opposite side of the lift.
7. The Three Hole Plates **#4** connect the Canopy Diagonal Brace, supplied with the canopy frame, to the Canopy Support Posts **#1** and **#2**. Loosely attach (2) Three Hole Plates **#4** on each Canopy Support Post as shown in Figure 1 using bolt **C**, flat washer **D** next to bolt head, flat washer **D** next to locknut, and locknut **E**. Position the Three Hole Plate so the diagonal brace is at approximately a 30 degree angle and tighten hardware.